


PS4: Aluminium 'snap' frames fixed to suspended wires

FIXING INSTRUCTIONS - SUSPENDED WIRES

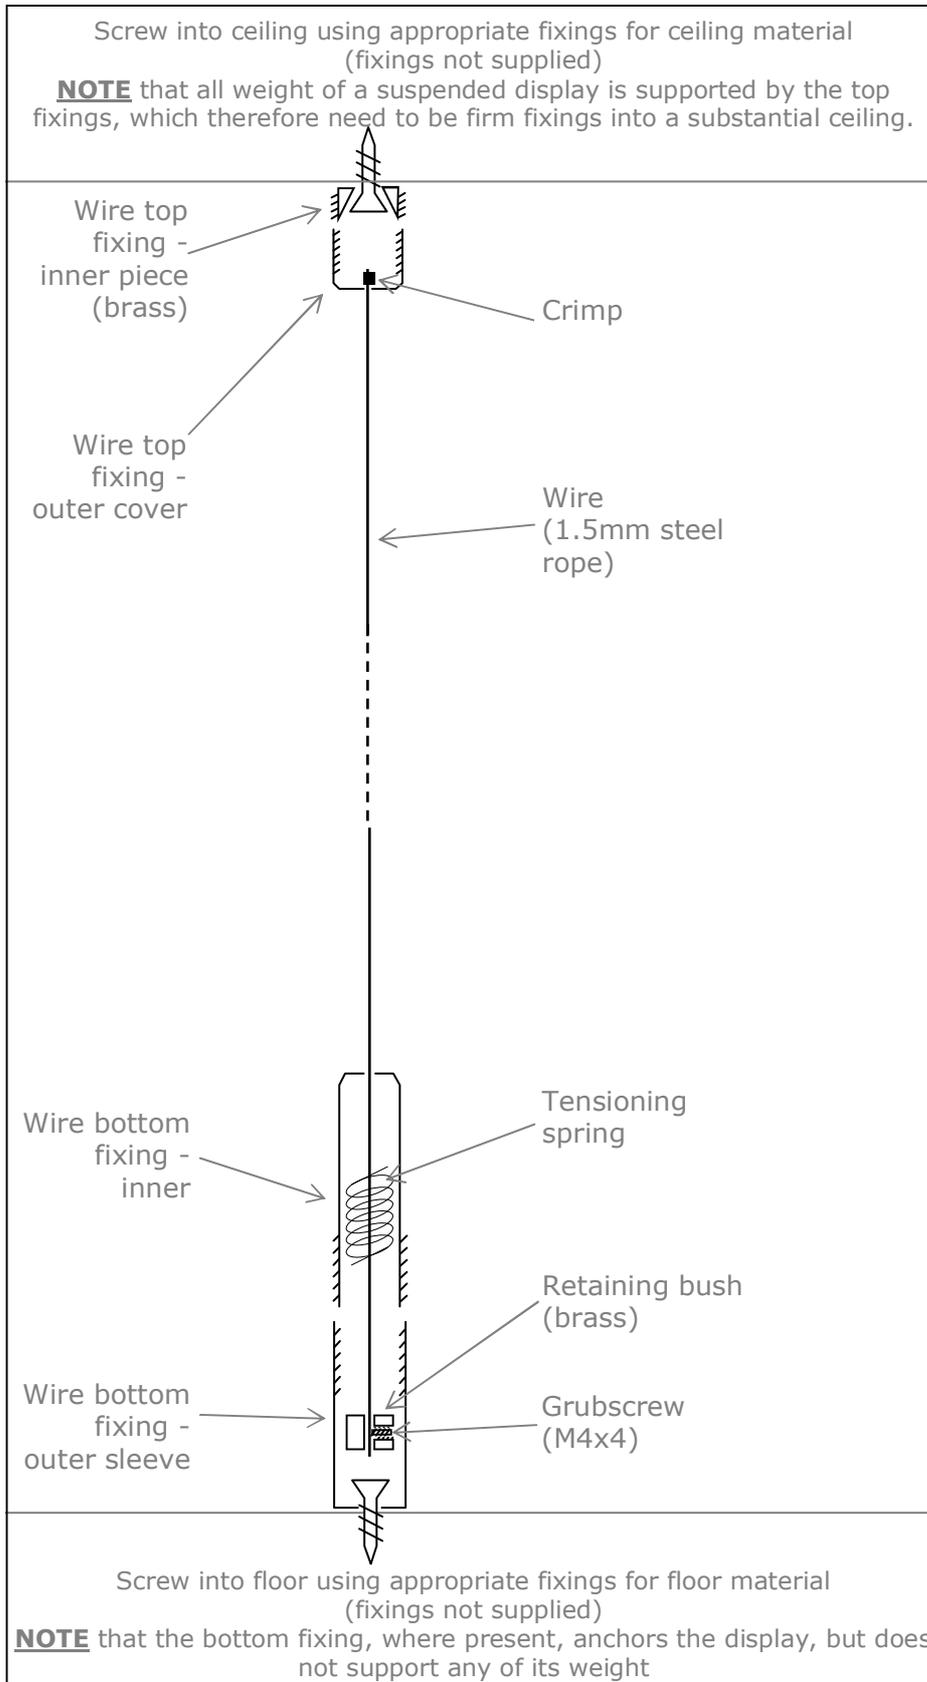

1. Mark the required positions of the wire top fixings on the ceiling.

The table on page 3 shows the wire centres required for the different standard sizes of poster holders.

For ceiling-fixed wires with no floor fixing, skip to step 3

2. Use a plumb line to mark the bottom fixings vertically below the top fixings, then check that these are the same distance apart as the ceiling positions.

For each wire:

3. Fix the brass inner top fixing to the ceiling in its marked position using appropriate fixings (not supplied).

4. Screw the outer top fixing, with the crimped end of the cable inside, on to the inner top fixing.

For ceiling-fixed wires with no floor fixing, skip to step 8

5. Unscrew the bottom fixing and screw the outer sleeve to the floor using an appropriate fixing (not supplied).

6. Loosen the brass bush at the bottom of the wire by partly unscrewing the grub screw (using the allen key supplied), so that the bush can slide up the wire.

7. Pull the wire taut, then position the brass bush so that the top of the bush is in line with the top of the outer sleeve of the wire bottom fixing (screwed to the floor).

8. (Repeat steps 3 - 7 until all wires have been fitted).

PS4: Aluminium 'snap' frames fixed to suspended wires

FIXING INSTRUCTIONS - SUSPENDED SNAP FRAMES

FIX HOLDERS TO WIRES:

Each 'snap' frame is fitted with four brass 'bosses' on the reverse.

1. Use the allen key provided to remove the grub screws from the narrower slot in each wire-fix support stud, so that the wires will be able to slide into these.
2. Loosen the other grub screws in the support studs, so that they will fit over the brass bosses.
3. Place the support studs in position over the brass bosses, with the narrow slots (designed to fit on to the wires) running vertically, then re-tighten the grub screws to hold the studs in position.
4. For each snap frame, hold it in position against the wires and loosely fix in place—this is done by replacing and tightening the grub screws in the wire slots of the fixings, once they have been positioned on the wires. They should only be held loosely in position.
5. Slide each snap frame to its required position, loosening grub screws a little if necessary, then tighten the fixings firmly on to one of the wires.
6. Use a spirit level to ensure that the frame is horizontal, then fix in position by tightening the grub screws on the other side.



Support stud:
single-sided display



Support stud:
double-sided display

WIRE CENTRES FOR SUSPENDED SNAP FRAMES

'SNAP' FRAME SIZE	A4 portrait	A4 landscape A3 portrait	A3 landscape A2 portrait	A2 landscape A1 portrait	A1 landscape A0 portrait
CENTRES FOR WIRES		331mm	454mm	628mm	875mm

